



PAD



 ${\bf 1}$ - Make Ø 8mm edge borings on the panel thickness using an appropriate template for driver-drill.




 ${\bf 2}$ - Make Ø 5mm face borings on the other panel.




3 - Screw the assembly fitting into the face bored panel using a cross screwdriver.

18 mm min.

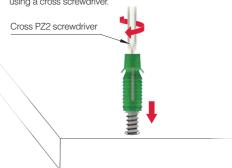

4 - Push manually the edge bored panel against the fitting until it is totally inserted.

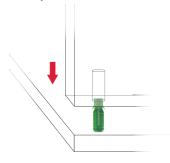

5 - The two panels will be permanently assembled without using any kind of glue.

