
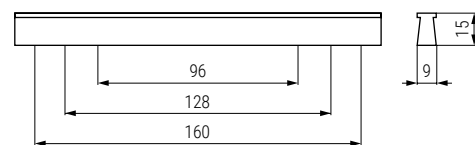





ZEBRA




- Para colocar con tornillos rosca madera.
- For installation with wood screws.

Código Code	Acabado Finish	
597.4	aluminio RAL9006/aluminium RAL9006	1/25



TRAMA

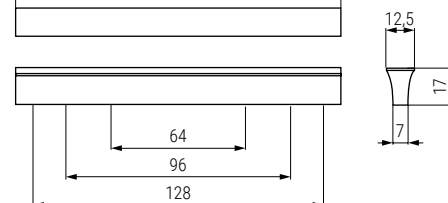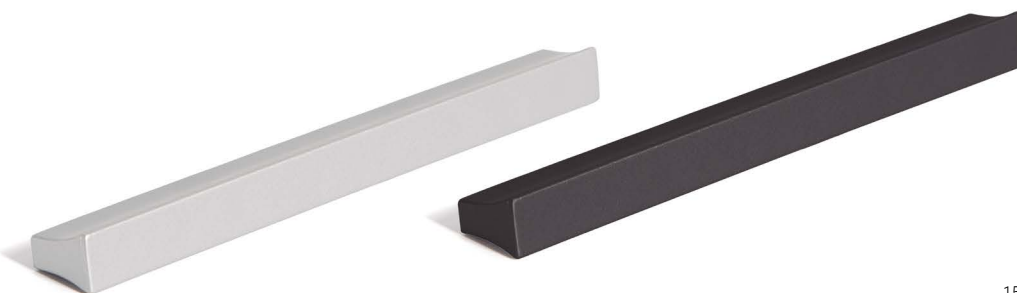

- Para colocar con tornillos rosca madera.
- For installation with wood screws.

Código Code	Acabado Finish	
597.3	aluminio RAL9006/aluminium RAL9006	1/25
597.23	negro mate/matt black	1/25

MAIOLA

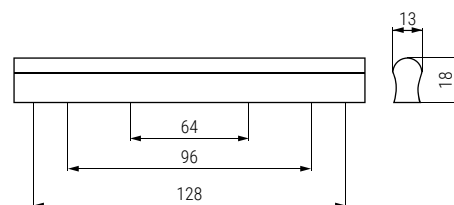

- Para colocar con tornillos rosca madera.
- For installation with wood screws.

Código Code	Acabado Finish	
597.2	aluminio RAL9006/aluminium RAL9006	1/25
597.22	negro mate/matt black	1/25

